

600TVL High-Resolution&Mini-Illumination Camera

600TVL HIGH RESOLUTION C/W Camera. DIGITAL BOX/DOME CAMERA SERIES

OWNER'S MANUAL

P/N:3810-0185D {Ver. 0907E}

Design and specifications are subject to change without notice.



- ◆ High Resolution 600TVL
- ◆ Ultra-low Illumination
- ◆ RS485 Remote Control
- ◆ Super Back light Compensation
- ◆ 4 Privacy Zone Setup
- ◆ Digital Noise Reduction Function





CAUTION
BE CAREFUL OF ELECTRIC
SHOCK. DO NOT OPEN.



Caution! To reduce the risk of electric shock, do not remove cover (or back).
NO USER-SERVICEABLE PARTS INSIDE. ONLY FOR PROFESSIONAL
REPAIR SERVICE PERSONNEL USE.



The light flash with arrow symbol, within an equilateral triangle, is intended to alert the user that the presence of un-insulated dangerous voltage" within the product's enclosure may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user that the presence of important operating and maintenance-(servicing) instructions in the literature accompanying the appliance.

**The graphic symbols with supplemental marking are on the bottom of the device.
"Warning-to prevent fire or shock hazard, do not expose the unit to rain or moisture."**



INFORMATION

This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at their own expense.

WARNING

The manufacturer could void the user's authority to operate the equipment.

CAUTION

To prevent electric shock and risk of fire hazards:

- Do not use power sources except for that specified.
- Do not expose this appliance to rain or moisture.

This installation should be made by a qualified service person and should abide to all local codes.



Thank you for purchasing this COLOR VIDEO CAMERA.

Before using this camera, please read this operation manual carefully to obtain the best result and keep this manual for future reference.

1. SAFETY INSTRUCTIONS	5
2. PRECAUTIONS	6
3. PRODUCT FEATURES	7
4. CONNECTION DIAGRAM	8
5. MENU OPERATION INTRODUCTION	9
6. TECHNICAL SPECIFICATION	33
7. TROUBLESHOOTING	34



Read Instructions

Read all of the safety and operating instructions before using the product.

Retain Instructions

Save this instructions for later use.

Cleaning

Unplug this appliance from wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Water and Moisture

Do not use this product near water or moisture. (For example. near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near swimming pool, etc.)

Installation

Do not place this product on an unstable cart, stand, or table, The product may fall causing serious injury to a child or adult, and damage to the product.

Use only with a cart or stand recommended by the manufacturer, or sold with the product. Mounting should follow the manufacturer is instructions, and should use a mounting accessory recommended by manufacturer.

Power source

This product should be operated only from the type of power source indicated on the marking label.

If you are not sure of the type of power supplied to your home, consult your dealer or local power company.



Do not install the camera in extreme temperature conditions.

Operate the camera under conditions where temperatures are within -10°C to -50°C .

Especially be careful for ventilation under high temperature.

Do not install or use the camera in an environment where the humidity is high.

It can cause the image quality to be poor.

Do not install the camera under unstable lighting conditions.

Severe lighting change or flicker can cause the camera to work improperly.

Never use the camera close to a gas or oil leak.

It can cause malfunctions to occur.

Do not disassemble the camera.

There are no user repairable parts inside.

Do not drop the camera or subject them to physical shocks.

It can cause malfunctions to occur.

Never keep the camera face to strong light directly.

It can damage CCD.

Do not expose the camera to rain or spill liquid on it.

If it gets wet, wipe it with dry cloth immediately.

Liquids can contain minerals that corrode the electronic components.



NOTE When this camera is installed near wireless communication devices that emit a strong electromagnetic field, irregularity such as noise on the monitor may appear.



1. Diagonal 6mm (1/3") 1/3 inch SONY
Super HAD CCD II

2. Min illumination Illumination(F1.2)

-0.1 LUX (COLOR)

- 0.001 LUX (B/W)

3. High performance function menus

- Ultra High Resolution (600TVL)

- SBLC (Super Back Light Compensation)

- DNR (Digital Noise Reduction)

-Privacy zone selectable.

- Motion detection selectable.

- MIRROR (HORIZONTAL)

- Flickerless On/Off.

4. Selectable, day & Night


- ICR(OPTIONAL)

5. RS-485 Communication Control Support
(OPTIONAL)

- Remote OSD menu control via an RS-485
interface is supported.



Connection Diagram:

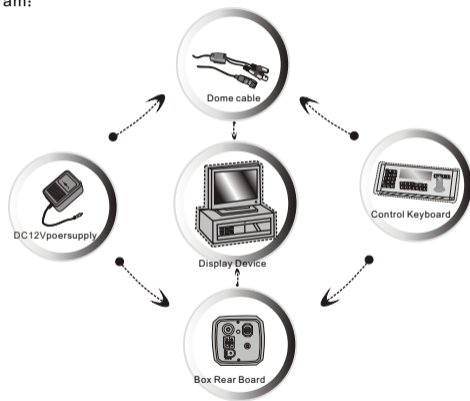



LENS	ESC	BRIGHTNESS	0~20
		FLK	OFF/ON
	DC	DC LEVEL	0~20
		FLK	OFF/ON
		SHUTTER	1/60(1/50),1/120(1/100),1/250,1/500,1/700,1/1K,1/2500,1/1600 1/2500,1/5K,1/7K,1/10K,1/30K,1/60K,1/120K
WHITE BAL	ATW		
	MANUAL	RED	0~160
		BLUE	0~160
PUSH			
AGC	ON	LEVEL	0~20
	OFF		
DAY/NIGHT	COLOR		
	B/W	BURST	
	EXT		OFF/ON
	AUTO	DELAY TIME	0~15




IMAGE ADJ	SBLC	OFF, LOW, MIDDLE, HIGH	
	DNR	OFF, LOW, MIDDLE, HIGH	
	SHARPNESS	LEVEL	0~20
	MIRROR	OFF, ON	
	MOTION	AREA	1~4
		DISPLAY	OFF/ON
		SENSITIVITY	1~24
		TOP	8~126
		BOTTOM	8~126
		LEFT	8~119
		RIGHT	8~119
		INITIAL	OFF/ON
		RETURN	
	PRIVACY	AREA	1~4
		DISPLAY	OFF/ON
		COLOR	WHITE, YELLOW, GREEN, BLUE, RED, BLACK, GRAY
		TOP	4~63
		BOTTOM	5~64
		LEFT	18~205
		RIGHT	19~206
INITIAL		OFF/ON	
RETURN			



IMAGE ADJ	COLOR GAIN	R-Y	0~20	
		B-Y	0~20	
	INITIAL	OFF/ON		
	RETURN			
GENERAL	CAM ID	0~255		
	ID DISPLAY	OFF/ON		
	CAM TITLE	OFF		
		ON	UP/DOWN/LEFT/RIGHT	
	LANGUAGE	ENG, CHN		
	SYNC	INT		
	BAUDRATE	2400,4800,9600,57600		
	VERSION			
	INITIAL	OFF/ON		
RETURN				
INITIAL	OFF/ON			
RETURN				



Dome Camera Control Board Diagram:
Use the joystick to navigate between 5 ways.

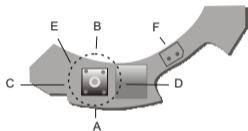

A: DOWN : Move down B: UP: Move up

C: LEFT: Move left

D: RIGHT: Move right

E: MENU(SET):


Press the joystick in its straight position.

F: Service Monitor Connector:

Use service monitor connector to set camera angle & focus when installing.

(Image cannot be seen if monitor output and service video output is used simultaneously.)

BoxRear Board Diagram:

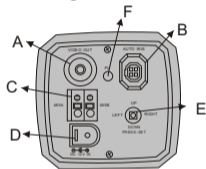

A: Video Out

B: Auto Iris plug

C: RS485 interface

D: Power interface

E: Menu settings(Menu selection, UP, Down Left, Right selection)


F: Power Indicator Light



MAIN MENU-GENERAL

Press **MENU** button to access the **SETUP** menu.

Select each sub-menu by moving "MENU" button to up, down, left, right. Press the MENU(SET) button to select.

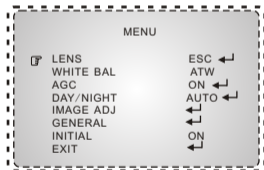


If the OSD MENU is changed then INITIAL will be OFF ← (EXCEPT: LENS, CAM ID, BAUDRATE)



LENS

Press the MENU button to access the SETUP menu.

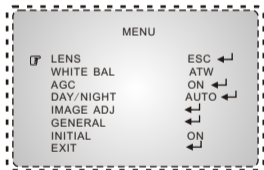




LENS

- Select LENS using the UP or DOWN button. You can change between ESC and DC using the LEFT or RIGHT button.

Select ESC and Press MENU button to display LENS ESC.

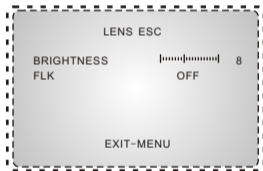

1. BRIGHTNESS

- Select BRIGHTNESS using the UP or DOWN button. You can adjust between 0-20 using the LEFT or RIGHT button.


2. FLK (FLICKERLESS)

- Select FLK using the UP or DOWN button. You can select between ON | OFF using the LEFT or RIGHT button.

NOTE: Press Menu to go back to Main Menu.



Select DC and Press the MENU button to activated LENS DC.

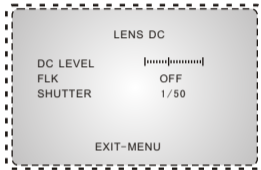

1. DC LEVEL (Adjust brightness of the image.)

- Select DC LEVEL using the UP or DOWN button. You can adjust it from 0 to 20 level by using the LEFT or RIGHT button.

2. FLK (FLICKERLESS)

- Select ELK using the UP or DOWN button. You can select between ON / OFF using the LEFT RIGHT button.

> OFF: You will be allowed to adjust the shutter speed.

3. SHUTTER (Adjusts the shutter speed of the lens.)


- Select SHUTTER using the UP or DOWN button. You can adjust from 1/60(1/50), 1/120(1/100), 1/250, 1/500, 1/700, 1/1K, 1/1600, 1/2500, 1/5K, 1/7K, 1/10K, 1/30K, 1/60K, 1/120K(sec) level using the LEFT or RIGHT button.



WHITE BAL (White Balance)

Select WHITE BAL using the UP or DOWN button. You can select from ATW, MANUAL, PUSH using the LEFT or RIGHT button.

1. **ATW** : Color temperature is automatically adjusted to 2,000°K ~ 10,000°K
2. **MANUAL** : To set a certain color temperature with RED CONT, BLUE CONT
 - Select MANUAL using the UP or DOWN button and press the MENU button to activate WB MANUAL option.

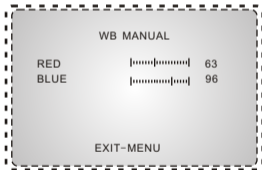

1. RED : To adjust density of RED (0~160)
2. BLUE : To adjust density of BLUE (0~160)


3. **PUSH**: If the set color temperature does not meet your environment, press the MENU button to adjust the color temperature to desired setting.



AGC (Automatic Gain Control)

Select AGC using the UP or DOWN button. You can select between OFF, ON using the LEFT or RIGHT button.

- 1 ON Select ON using the LEFT or RIGHT button and press the MENU button to activate AGC option

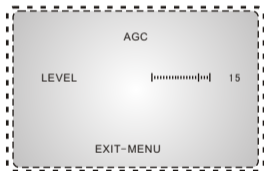

1. LEVEL: You can adjust between 0-20 using LEFT or RIGHT button.


2.OFF:Disable the AGC



DAY/NIGHT

Select DAY / NIGHT using the UP or DOWN button. You can select between AUTO, COLOR, B/W, EXT using the LEFT or RIGHT button.

1. **COLOR**: for color mode only (DAY mode)
2. **B/W** : for BLACK and WHITE mode only (NIGHT mode)
 - Select B/W using the LEFT or RIGHT button and press the MENU button to activate COLOR BURST option.

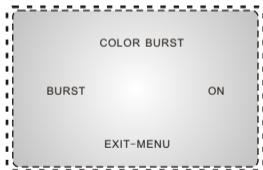

It is possible to select ON/OFF using the LEFT or RIGHT button.



3. **EXT:** To switch between COLOR or BLACK and WHITE depending on external signals.
NOTE: This function is not supported for this model. (Optional)
4. **AUTO :** To switch between COLOR or BLACK and WHITE automatically upon the illumination.
-Select AUTO using the LEFT or RIGHT button and press MENU button to activate CHANGE DELAY TIME option.



You can adjust the DELAY TIME from 1 ~ 15 using the LEFT or RIGHT button.

NOTE: In AUTO D&N model, external IR lights will cause camera D/N filter to flicker.
Camera using external IR may cause D&N filter to flicker.



IMAGE ADJ(Image Adjust)

Select IMAGE ADJ using the UP or DOWN button and press the MENU button to activate the IMAGE ADJ mode.



- 1. SBLC (Super Back Light Compensation) :** To lighten a darker part of the image
- Select SBLC using the UP or DOWN button. You can select between OFF, LOW, MIDDLE, HIGH using the LEFT or RIGHT button.




2. DNR (Digital Noise Reduction) : To reduce the image noise especially during the low ambient lighting conditions.

- Select DNR using the UP or DOWN button. You can adjust between OFF, LOW, MIDDLE, HIGH using the LEFT or RIGHT button

3. SHARPNESS : To adjust SHARPNESS of the image.

- Select SHARPNESS using the UP or DOWN button. You can select between ON OFF using the LEFT or RIGHT button
- Select +i and press the MEUN button to activate SHARPNESS option.

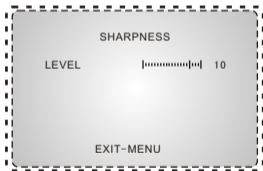

- You can adjust the sharpness from 0 ~ 20 using the LEFT or RIGHT button.



4. MIRROR



- Select MIRROR using the UP or DOWN button. You can select from ON/OFF using the LEFT or RIGHT button.

(1) ON : Horizontal image flip.

(2) OFF: default

5. MOTION (Motion Detect)

Select MOTION using the UP or DOWN button and press MENU button to activate MOTION DETECT option.

MOTION		
	AREA	1
	DISPLAY	OFF
	SENSITIVITY	5
	TOP	22
	BOTTOM	74
	LEFT	13
	RIGHT	89
	INITIAL	ON
	RETURN	



1) AREA : To specify MOTION DETECTION area

- Select AREA using the UP or DOWN button. You can select from area 14 position using the LEFT or RIGHT button.



2) DISPLAY : To display MOTION DETECTED area on the video

- Select DISPLAY using the UP or DOWN button. You can select between ON/OFF using the LEFT or RIGHT button.
(1) ON : display the MOTION DETECTED area on the screen
(2) OFF: disable



3) SENSITIVITY : To setup the motion sensitivity

- Select SENSITIVITY using the UP or DOWN button. You can adjust the motion sensitivity of a movement from 124 using the LEFT or RIGHT button.
(1) 1: most sensitive (highest)
(2) 24 : least sensitive (lowest)



4) TOP | BOTTOM | LEFT / RIGHT: Users can specify MOTION DETECTED area.



- Select TOP, BOTTOM, LEFT, or RIGHT using the UP or DOWN button. You can adjust the AREA using the LEFT or RIGHT button.

(1) TOP : extend or reduce the upper area of the MOTION DETECTED area (8 ~ 126)

(2) BOTTOM : extend or reduce the bottom area of the MOTION DETECTED area (8 ~ 126)

(3) LEFT: extend or reduce the left side of the MOTION DETECTED area (4 ~ 191)

(4) RIGHT: extend or reduce the right side of the MOTION DETECTED area (4 ~ 191)

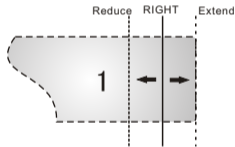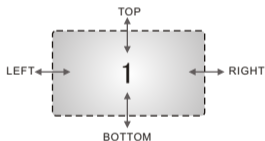

5) INITIAL : To reset the MOTION DETECT mode.

- Select INITIAL using the UP or DOWN button. You can reset the MOTION DETECT mode using the MENU button.

6) RETURN : To return to IMAGE ADJ MENU

- Select RETURN using the UP or DOWN button. You can return to IMAGE ADJ MENU using the MENU button.



6 PRIVACY

- Select **PRIVACY** using the **UP** or **DOWN** button and press the **MENU** button to active the **PRIVACY** option.





1) AREA: To specify the PRIVACY area

- Select AREA using the UP or DOWN button. You can select area from 1 4 position using the LEFT or RIGHT button.



2) DISPLAY : To display the Privacy Zone area

- Select DISPLAY using the UP or DOWN button. You can select between ON/OFF using the LEFT or RIGHT button.

- (1) ON : display the Privacy Zone area
- (2) OFF: disable



3) COLOR : To change color of privacy zone

- Select COLOR using the UP or DOWN button. You can adjust from WHITE, YELLOW, GREEN, BLUE, RED, BLACK, or GRAY using the LEFT or RIGHT button.



4) TOP | BOTTOM | LEFT / RIGHT: Users can specify PRIVACY ZONE area



- Select TOP, BOTTOM, LEFT or RIGHT using the UP or DOWN button. You can adjust the privacy zone using the LEFT or RIGHT button.

(1) TOP : extend or reduce the upper area of the MOTION DETECTED area (4 ~ 63)

(2) BOTTOM extend or reduce the bottom area of the MOTION DETECTED area (5 ~ 64)

(3) LEFT: extend or reduce the left side of the MOTION DETECTED area (18 ~ 205)

(4) RIGHT: extend or reduce the right side of the MOTION DETECTED area (19 ~ 206)

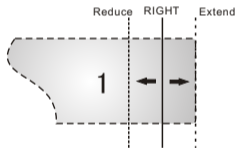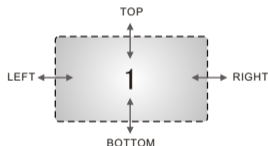

5) INITIAL : To reset to factory default only on the PRIVACY mode.

- Select INITIAL using the UP or DOWN button. You can reset the PRIVACY mode using the MENU button.


6) RETURN : To return to IMAGE ADJ MENU

- Select RETURN using the UP or DOWN button. You can return to IMAGE ADJ MENU using the MENU button.



7. COLOR GAIN

- Select COLOR GAIN using the UP or DOWN button and press MENU button to activate COLOR MODE option.

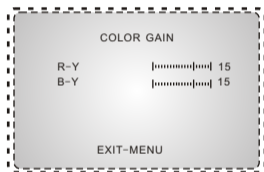

1. R-Y: To adjust density of RED (0~20)
2. B-Y: To adjust density of BLUE (0~20)

8. INITIAL: To reset to factory default only on the IMAGE ADJ mode.

- Select INITIAL using the UP or DOWN button and reset the IMAGE ADJ mode using the MENU button.

9. RETURN: To return to MAIN MENU

- Select RETURN using the UP or DOWN button and return to MENU using the MENU button.



GENEAAL

Select **GENERAL** using the UP or DOWN button and press the MENU button to activate the **GENERAL** mode.

GENERAL	
☐ CAMID	1
ID DISPLAY	OFF
CAM TITLE	OFF
LANGUAGE	ENG
SYNC	INT
BAUDRATE	2400
VERSION	AP. 1. 4. 03
INITIAL	ON
RETURN	←



1. CAM ID : CAMERA ID (RS-485 Communication ID)

- Select CAM ID using the UP or DOWN button. You can select between the range 000~255 using the LEFT or RIGHT button.

NOTICE : CAM ID does not reset after user setting.

2. ID DISPLAY (CAMERA ID DISPLAY)

- Select ID DISPLAY using the UP or DOWN button. You can select between ON/OFF using the LEFT or RIGHT button.

- (1) ON : To display camera ID on the screen
- (2) OFF: disable


3. CAM TITLE

- Select CAM TITLE using the UP or DOWN button.
You can adjust ON/OFF using the LEFT or RIGHT button.

- (1) ON : To display the camera title on the screen
- (2) OFF: disable

- Select ON and Press MENU button to display CAM TITLE.

- (1) UP/DN : To select character using the UP or DOWN button (0~9,A~Z)
- (2) LE/RI : To select position using the LEFT or RIGHT button.

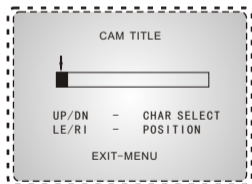



4. LANGUAGE

- Select LANGUAGE using the UP or DOWN button. You can change between ENG or CHN using the LEFT or RIGHT button.

5. SYNC

- Internal Synchronization Type: INT

6. BAUDRATE

- Select BAUDRATE using the UP or DOWN button. You can change from 2400bps, 4800bps, 9600bps, 57600bps using the LEFT or RIGHT button.

7. VERSION

8. INITIAL : To reset to factory default only on the GENERAL mode.

- Select INITIAL using the UP or DOWN button, You can reset to factory default for GENERAL mode using the MENU button.

9. RETURN : To return to MENU

- Select RETURN using the UP or DOWN button. You can return to the MENU using the MENU button.

(INITIAL)

To reset to factory default.

- Select INITIAL using the UP or DOWN button and reset to factory default using the MENU button.

(EXIT)

To exit out from the OSD setup menu.

- Select EXIT using the UP or DOWN button and close the OSD setup menu by pressing MENU button.



Model		
Signal System	PAL	NTSC
Scanning System	2: 1Interlace	
Scanning Frequency(H)	15.625KHZ	
Scanning Frequency(V)	50HZ	60HZ
Image Sensor	1/3 inch SONY Super HAD CCD II	
Sync. System	Internal	
Effective Pixels Number	752(H) x 582(V)	768(H) x 494(V)
Horizontal Resolution	Colour600TV Lines (B/W650TV Lines)	
Video Output Level	1.0Vp-p(75 Ω , Composite)	
S/N Ratio	More than50dB(AGC OFF)	
Min. Illumination	0.1lux(Color),0.001lux(B/W)	
Day & Night System	AUTO/COLOR/BW	
Digital Noise Reduction (SDNR)	Low, Middle, High, Off	
AGC	On/Off	
SBLC	Off, Low, Middle, High	
Electronic Shutter Speed	1/50~1/120,000	1/60~1/120,000
OSD Menu	English, Chinese	
Mirror Function	Horizontal	
Privacy Zone	On/Off (4 Programmable Zone)	
Motion detection	On/Off (4 Programmable Zone)	
White Balance	ATW, Manual, Push	
Power Voltage	DC12V(DC10V~DC15)	
Power Consumption	Max2.2W/180mA	



If you have trouble operating your camera, refer to the following guidelines. If the guidelines do not help you to solve the problem, contact an authorized technician.

Nothing appears on the screen

1. Check that the power cord and line connection between the camera and monitor are fixed properly.
2. Check that you have properly connected VIDEO cable to the camera VIDEO output jack.

The image on the screen is dim.

1. Is lens stained with dirt? Clean your lens with soft, clean cloth.
2. Set the monitor to proper condition.
3. If the camera is exposed to too strong light, change the camera position.
4. Adjust the lens' focus properly.

The image on the screen is dark

1. Adjust the contrast feature of the monitor.
2. If you have an intermediate device, set the 750 / Hi-z properly.
3. Adjust DC Level, VR level properly.

The camera is not working properly, and the surface of the camera is hot.

Check that you have properly connected the camera to an appropriate power source.

The image on the screen flickers.

Check whether the camera is exposed to strong sunlight or fluorescent lighting.